
## 8. Analog Out, a fading LED

PWM, short for Pulse Width Modulation, is a technique used to encode analog signal level into a digital one.

There are 6 PMW interfaces on an Arduino Uno: Digital pins 3, 5, 6, 9, 10, and 11, all are indicated with a  $\sim$  (tilde).

We will explore this PWM magic by changing the brightness of a LED over time.

## Circuit

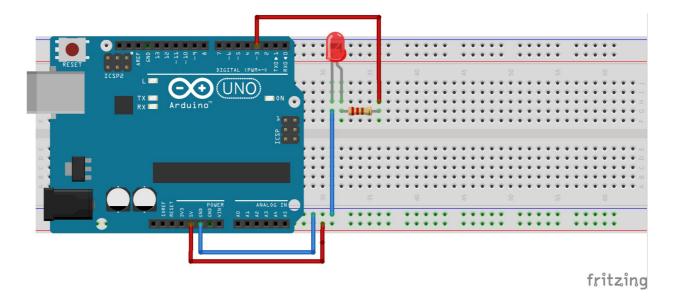

## Code

```
// fade out from max to min in increments of ? points:
for (int fadeValue = 255; fadeValue >= 0; fadeValue -= fadeAmount) {
    // sets the value (range from 0 to 255):
    analogWrite(ledPin, fadeValue);
    // wait for 30 milliseconds to see the dimming effect
    delay(30);
}
```